

You will need:

- Clean cloth
- Low tack masking tape
- Paintbrush
- Paint stirrer
- Putty knife or similar for filling
- Resene Enamacryl tinted to Resene Alabaster
- Resene Quick Dry
- Sandpaper
- Wood filler



Step one
Fill any nail holes with wood filler and allow to dry.



Step two
Lightly sand the filled nail holes, as shown.



Step three
Wipe off any sanding dust with a clean cloth.



Step four
Carefully mask off the window frame and surrounding wall with low tack masking tape.



Step five
Stir the Resene Quick Dry with a paint stirrer.



Step six
Apply one coat of Resene Quick Dry to the bare wood and allow two hours to dry.




Step seven
Stir the Resene Enamacryl with a paint stirrer.




Step eight
Paint the woodwork with two coats of Resene Alabaster, allowing two hours for each coat to dry. Carefully remove the masking tape before the paint dries.

If you've just had new white windows fitted, it's easy to transform the bare wooden sills and surrounds with a matching clean white finish.

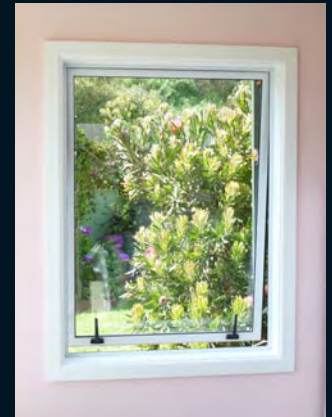

To get the look:

The surrounding wall has been painted with Resene SpaceCote Flat tinted to Resene Cosmos.

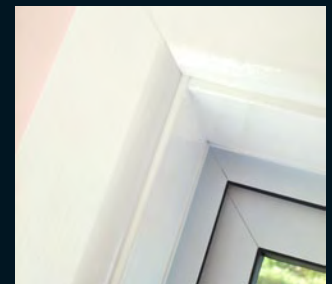

Other ideas:

New wooden window surrounds can also be varnished with Resene Aquaclear but ensure that the nail holes are filled with an appropriately coloured proprietary wood filler.

For more ideas and inspiration visit your local Resene ColorShop or www.resene.co.nz or www.resene.com.au.

Check out our special Artists section online www.resene.co.nz/artists/artists_canvas.htm or www.resene.com.au/artists/artists_canvas.htm.