

GOOD PROMOTION

Front entrance quick fix

Is your front entrance looking a little tatty? With a clever bit of colour matching and spot patching you can have this important part of your home tidied up in no time



before

YOU WILL NEED

- Sandpaper of varying grades (100-220)
- Paintbrushes
- Broom, bucket and warm soapy water
- 500ml-1 litre pots of Resene Lumbersider waterborne low sheen in shades of your choice (see 'Get the look' at right)
- 500ml Resene Lustacryl semi-gloss waterborne enamel (for door)
- 500ml Resene Quick Dry waterborne primer undercoat (optional)




Step one

Sand the entire paintable surface using a heavier, then lighter grade sandpaper. Once sanding is complete, sweep and wash down all surfaces with warm soapy water and rinse. Allow to dry. We repainted this step using the colour Resene Kermadec in Resene Lumbersider waterborne low sheen paint.



Step two

If you are not covering an entire painted surface, spot sand any areas that need patching using a light grade sandpaper. If necessary, cover bare surfaces with a coat of Resene Quick Dry waterborne primer undercoat, allow to dry and lightly sand.

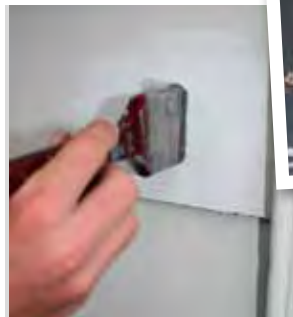

Step three

Cover all paintable surfaces with a top coat in a shade of your choice. We matched the existing weatherboard colour to Resene Kandinsky in Resene Lumbersider waterborne low sheen and repainted the door in Resene Jalapeno, in hardwearing Resene Lustacryl semi-gloss waterborne enamel.



Get the look:

Resene's ColourMatch iPhone app gives you instant access to thousands of Resene colours, enabling you to colour match from any image taken on your iPhone. You can download it free at www.resene.co.nz. Or use the Resene ColourHelper at Resene ColorShops to measure your colour and find the nearest Resene paint colours.

Call 0800 RESENE (737 363)
visit www.resene.co.nz or
email advice@resene.co.nz

Resene

the paint the professionals use