











**Step 1** Wipe chairs down with a soft cloth to remove any dust or dirt.

Step 2 With a small brush, paint frames with Resene Enamacryl Metallic. We used Resene Silver Aluminium. We chose not to use a base coat in order to achieve a brushed-metal effect, but for a smooth finish, undercoat first in Resene Lumbersider.


**Step 3** To protect the metallic finish, topcoat the frames in Resene Multishield+ (for outdoor use) or Resene Aquaclear (for indoor use).

**Step 4** Paint wicker with Resene Enamacryl Gloss Waterborne Enamel. An old paintbrush works best to get between the woven strands. We chose Resene Flamingo for a burst of brightness.

Call 0800 RESENE (737 363) visit www.resene.co.nz or email advice@resene.co.nz



the paint the professionals use

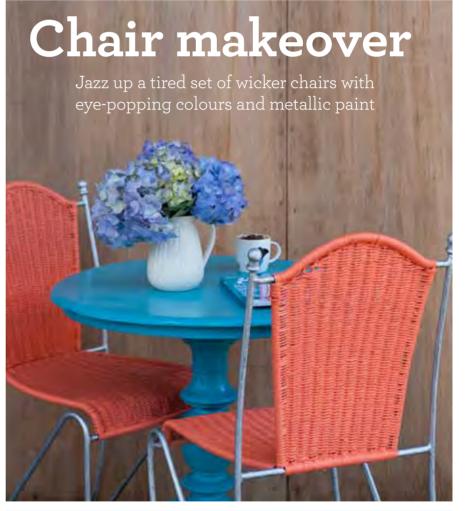

## YOU WILL NEED

- Old wicker chairs with metal frames
- Small paintbrush
- Rough medium-sized paintbrush
- 500ml Resene Lumbersider (optional)
- 1 litre Resene Enamacryl Gloss Waterborne Enamel
- 500ml Resene Enamacryl Metallic
- 500ml Resene Multishield+ or Resene Aquaclear