NB.This chart is from the Resene historical file. Please refer to current

Resene colour charts


for the latest colour options

Resene timber stain

exterior natural wood finish



The timber stain the Professionals use

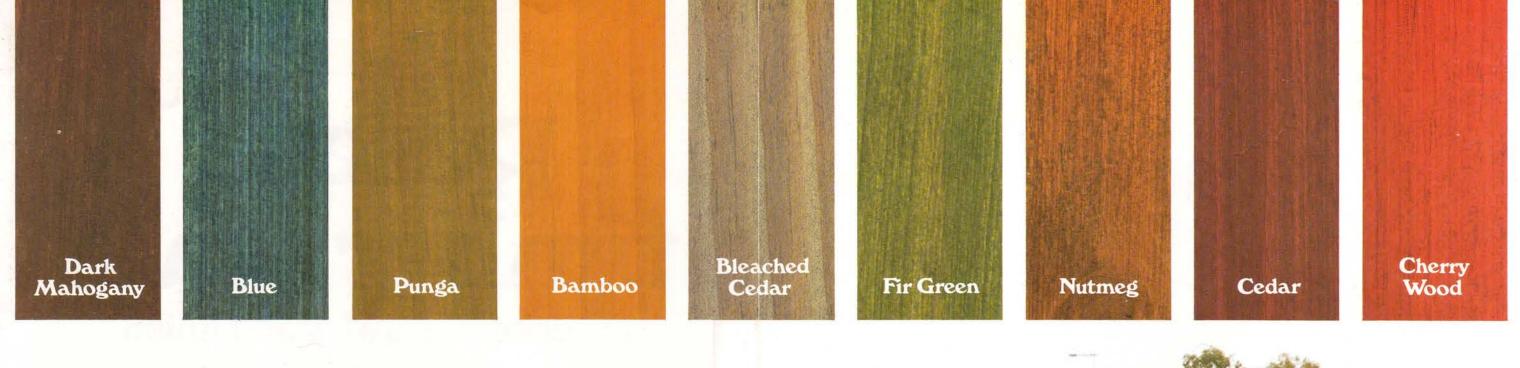

Resene timber stain

exterior natural wood finish

Resene Timber Stain is the natural colourful way of treating and protecting exterior

woodwork and enhancing the natural grain.

Resene Timber Stain can be applied directly to most dressed or rough sawn timbers and brings a new colourful dimension to weather boards,

fences, garden furniture, beams etc.

Resene Timber Stain is based on pure linseed oil to ensure deep penetration and a lasting natural finish.

Colours can be intermixed to give a much wider range.



COLOURS SHOWN ON THIS CHART ARE AS CLOSE AS MODERN PRINTING WILL ALLOW, FOR MORE ACCURATE MATCH, SEE TIMBER SAMPLES.

Ash Brown	Poplar	Redwood	Grey Green	Dark Oak	English Walnut	Burmese Teak	Light Oak	Black
						计图制		

esene Timber Stain is not a aint and when applied to imber it allows the natural grain to show through. Colour may vary on some timbers. Resene Timber Stain has been developed from a formulation prepared by the American Forest Products Laboratory for the treatment of Redwood. Cedar and Oregon timbers. It contains water repellent chemicals, three waterproofing materials along with carefully selected mould inhibitors. All these are suspended in a linseed oil base and pigmented with oxides offering high colour retention

In most climatic conditions Resene Timber Stain maintains its colour and protective properties for 3 to 5 years. However,



in areas where maximum exposure to the sun causes the timber to dry out rapidly, more frequent coatings may be required.

Directions:

Resene Timber Stain may be applied to almost all timbers available in New Zealand. Ensure all timber is dry before application.

Apply one coat of Resene Timber Stain by brush ensuring that it is pushed well into the surface.

Putty all nail holes with linseed oil putty matched to the selected colour.

Pay particular attention to joints and end grains. On particularly hard close grained timbers, because of their more impervious nature, the Stain may need to be wiped with a rough cloth after 12 hours to leave an even finish.

A second coat should be applied after three to four weeks. Where Resene Timber Stain is used on weatherboard, the first coat should be applied before it is erected.

Wash brushes in mineral turps. Resene Timber Stain covers approximately 8 to 10 square metres per litre on rough, sawn timber 14 — 16 square metres per litre on dressed timber.

Resene timber stain

exterior natural wood finish