

SPA POOL TOWEL STAND

Keep towels off the ground while adding a splash of colour to your garden with hanging-basket flowers.

WORDS & PHOTOS KLAUDIA KRUPA



You will need

MATERIALS

- 100mm x 100mm treated and dressed pine cut to the following lengths:
 - » 1 x 2100mm
 - » 4 x 450mm
- 2 x hanging basket brackets
- 2 x hanging baskets
- 35mm external use screws
- 4 x hooks
- 9 x 150mm bugle screws
- Fence post cap
- Potting mix
- Resene Waterborne Woodsman penetrating oil stain in your choice of colour (we used Resene Dark Oak)
- Your choice of flowers

TOOLS


- Clamps
- Drill
- Impact driver
- Paintbrush
- Pencil
- Tape measure



BROUGHT TO YOU BY

Resene

the paint the professionals use

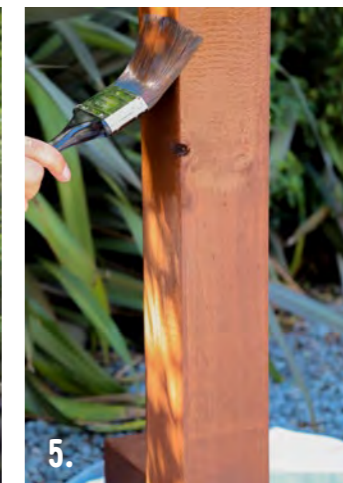

STEP ONE

Place all five lengths of timber into position, as shown, with the 2100mm length positioned vertically.

STEP TWO

Using an impact driver, screw the base together using two screws for each of the four base lengths: one screw to attach it to the vertical post and one to attach it to the adjacent support (as shown). Make sure the screws are not directly opposite each other to

avoid them crossing over and touching in the middle. You may find a clamp useful to help hold it together.

STEP THREE

Using a bugle screw from above (or glue if you prefer), attach the post cap to the top of the stand.

STEP FOUR

Stain the stand with Resene Waterborne Woodsman penetrating oil stain and allow to dry. Look out for any drips on the vertical sides.

STEP FIVE

Apply a second coat of the Resene stain and allow to dry.

STEP SIX



Mark out the position of the screw holes for all four hooks, with one hook on each side of the post. If kids will be hanging their towels, a couple of lower hooks could be handy; likewise, a couple of higher hooks could be useful for longer robes. A tape measure may be helpful here to ensure the hooks are centrally positioned and vertically level.





Here's another idea


This towel stand would also be handy next to a pool during the summer months.

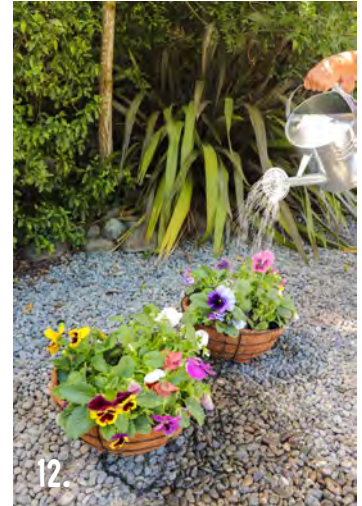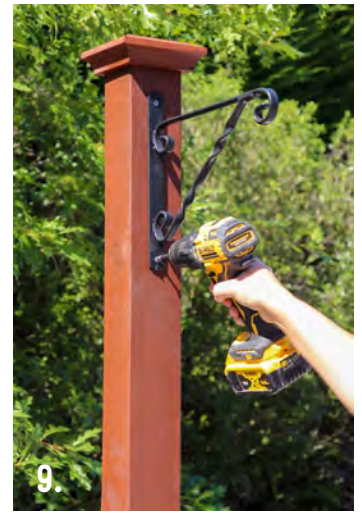



Top tip

Flowers in hanging baskets will need to be watered more frequently than those in pots.

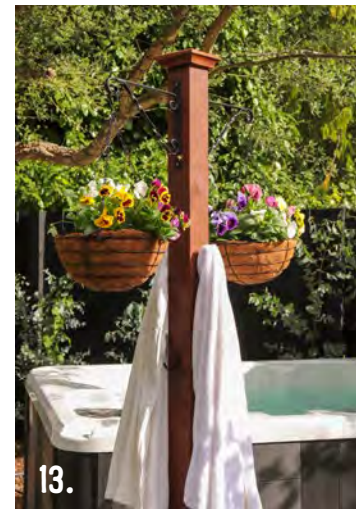

STEP SEVEN

Drill pilot holes for the hooks at each of the marked points.

STEP EIGHT

Using 35mm screws, screw each hook into place.

STEP NINE

Make a mark 4cm down from the base of the cap, on two opposite sides of the post. Align the top of the hanging basket bracket with

the mark and screw each bracket into position, drilling pilot holes first. You may find a clamp useful to hold the brackets in position.

STEP TEN

Half fill both flower baskets with potting mix.

STEP ELEVEN

Plant your flowers and top up with potting mix if needed.

STEP TWELVE

After planting, water both baskets well.

STEP THIRTEEN

Move the stand into position and hang both baskets on the brackets.

Resene

the paint the professionals use

For more on paints and stains phone 0800 RESENE (0800 737 363) or visit your Resene ColorShop resene.co.nz/colorshops