



Concrete evidence



For more on paints
phone 0800 RESENE
or visit www.resene.co.nz

Mark Rayner transforms a tired old concrete patio with a lick of paint.

To get the look

MARK painted the base of the central sundial with Resene Lumbersider in Resene Black Forest

You will need:

- Resene Non-Skid Deck & Path in Resene Abanakee
- Resene Non-Skid Deck & Path in Resene Helter Skelter
- Resene Lumbersider in Resene Alabaster
- Resene Moss & Mould Killer
- Resene Paint Prep and Housewash
- Garden sprayer
- Hi-solids paint roller and tray
- Brush and bucket
- Paintbrushes
- Waterblaster
- Masking tape
- Pencil
- Ruler



1

MIX one part Resene Moss & Mould Killer to five parts clean water and apply generously to the concrete patio with a garden sprayer. Leave for 48 hours.



2

RINSE off the Resene Moss & Mould Killer with clean water, then mix one part Resene Paint Prep and Housewash with three parts clean water. Use this to clean the concrete patio using a stiff brush. Once the concrete is clean, rinse it off with clean water.




3

USE a waterblaster to remove any stubborn residue from the concrete. Leave to dry.



4

USING the hi-solids roller, apply one coat of Resene Abanakee to the concrete surface. Allow to dry for a minimum of three hours before applying a second coat.

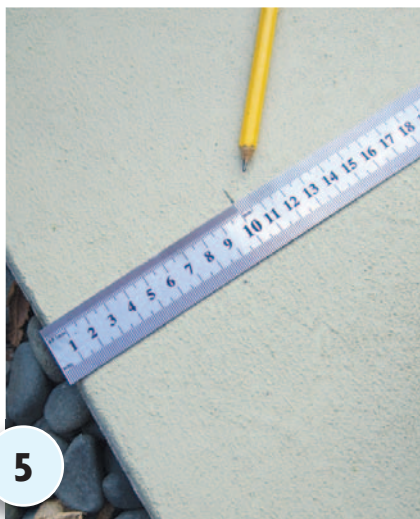

5

USE a ruler and pencil to make three or four marks 100mm from one edge of the concrete patio. Apply masking tape to form a strip along one side of the concrete patio, using the pencil marks as a guide.



6

USE an old paintbrush and stippling technique to apply one coat of Resene Helter Skelter to the masked-off strip. Allow to dry and apply a second coat. Repeat steps five and six until all edges of the patio area are painted.



7

CAREFULLY remove the masking tape.



8

COMPLETE the makeover by applying two coats of Resene Alabaster to the adjacent pergola legs and trellising.