

★★★ Difficulty level ★ easy ★★ moderate ★★★ challenging Fun with furniture with Mark Rayner – 50

Give an old painted cupboard a new lease of life with a little bit of help from Resene.




### You will need:

- Chrome cupboard door handles
- Clean cloths
- Drill with 4mm drill bit
- Filler
- Old painted cupboard
- Paintbrush
- Resene Lustacryl tinted to Resene Dingley
- Resene Lustacryl tinted to Resene Eighth Wheatfield
- Resene Quick Dry
- Rubber gloves
- Sanding block and sandpaper
- Screwdriver
- Warm soapy water



#### Step one

Remove the old door handles from the cupboard.

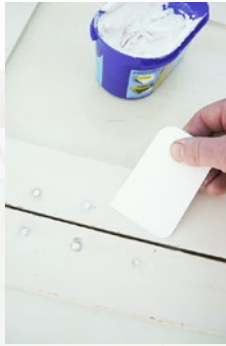

#### Step two

Fill the holes and any other indentations with the filler and allow to dry.



#### Step three

Sand the filled areas smooth and then sand the entire cupboard to 'key' the surface.



#### Step four

Wipe off sanding residue with a clean cloth and then wash the woodwork with warm soapy water. Wipe clean with a dry cloth and allow to dry.



#### Step five

Apply one coat of Resene Quick Dry to any filled areas and any areas of bare wood and allow to dry.



#### Step six

Apply two coats of Resene Lustacryl tinted to Resene Eighth Wheatfield to the inside of the cupboard, allowing two hours for each coat to dry.



#### Step seven

Apply two coats of Resene Lustacryl tinted to Resene Dingley to the outside of the cupboard, allowing two hours for each coat to dry.



#### Step eight

Measure, mark and drill new holes for the chrome handles and fix into place with a screwdriver.

### To get the look:

Mark used Resene Kristal ClearFloor 2K on the wooden floorboards.



### Other ideas:

For a distressed effect, paint two coats of Resene Eighth Wheatfield over the top of the Resene Dingley and sand back edges to reveal the colour beneath.

For more ideas and inspiration visit your local Resene ColorShop or [www.resene.com/colorshops](http://www.resene.com/colorshops).

Check out more project ideas online [www.resene.com/projects](http://www.resene.com/projects).