

★★★ Difficulty level ★ easy ★★ moderate ★★★ challenging

Ways with wood
with Mark Rayner – 52

You will need:

- Broom
- Brush and dustpan
- Floorsanding equipment (consult your local hire centre)
- Hammer
- Nail punch


- Paintbrush
- Paint scraper
- Paint stirrer
- Resene Aquaclear gloss or Resene Qristal ClearFloor
- Suitable protective clothing – see Resene

Data Sheet D53 and the Resene Putting your safety first brochure for further information


- Vacuum cleaner




Step one
Sweep the floor clean of any dust.

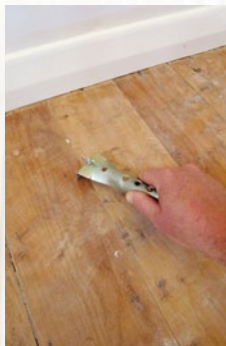

Step two
Use the scraper to carefully remove any loose carpet glue residue, scraping along the grain.

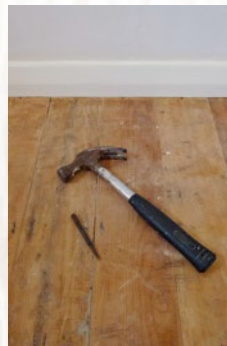


Step three
Punch any protruding nailheads with the hammer and nail punch.

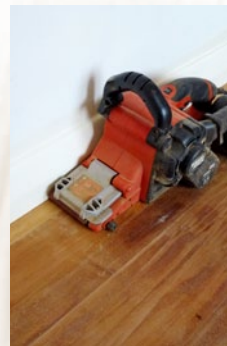

Step four
Using appropriate floor sanding equipment and wearing recommended protective clothing, carefully sand the edges of the floor, sanding in the direction of the grain.



Step five
Again, using appropriate floor sanding equipment and wearing recommended protective clothing, carefully sand the remainder of the floor, sanding in the direction of the grain.

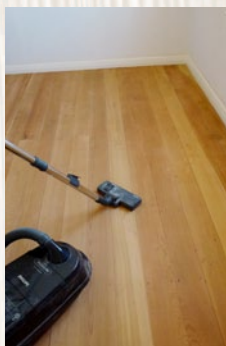

Step six
Vacuum clean and wipe over with a slightly damp cloth, ensuring the floor is dry before going on to the next step.




Step seven
Carefully stir the Resene Aquaclear or Resene Qristal ClearFloor.



Step eight
Apply three coats of Resene Aquaclear or Resene Qristal ClearFloor to the floor, brushing in the direction of the grain, allowing dry time between each coat. Leave for 48 hours before allowing foot traffic on the floor.

Transform a plain wooden floor into a thing of beauty using Resene Aquaclear or Resene Qristal ClearFloor.

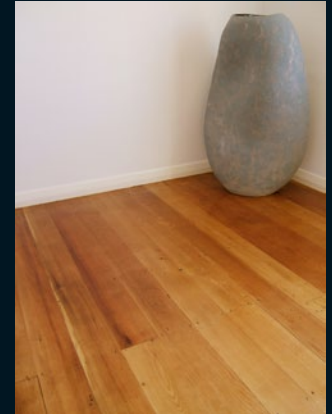

To get the look:

Mark painted the background wall with Resene SpaceCote Flat tinted to Resene Half Alabaster.



Other ideas:

For floors with heavy foot traffic use Resene Polythane clear polyurethane.

For more ideas and inspiration visit your local Resene ColorShop or the Resene website.