

### You will need:

- 90mm galvanised nails
- Exterior PVA glue
- Hammer
- Paintbrush
- Pencil
- Resene Lumbersider tinted to Resene Canterbury Clay
- Resene Quick Dry
- Sandpaper
- Saw
- Tape measure
- Tongue and groove landscaping timber (approx 1.5m)



**Step one**  
Mark two lengths measuring 300mm and two lengths measuring 450mm from the landscaping timber.



**Step two**  
Use the back of the saw to rule a perpendicular cutting line.



**Step three**  
Cut the lengths to size with a saw.



**Step four**  
Smooth any rough edges with sandpaper.



**Step five**  
Assemble the mini garlic bed, as shown, fixing at each corner with PVA glue and 90mm nails.



**Step six**  
Apply one coat of Resene Quick Dry to the mini garlic bed and allow to dry.



**Step seven**  
Apply one coat of Resene Lumbersider tinted to Resene Canterbury Clay to the mini garlic bed and allow to dry.




**Step eight**  
Apply a second coat of Resene Lumbersider tinted to Resene Canterbury Clay to the mini garlic bed and allow to dry.

It's easy to build this mini garlic bed from landscaping timber – perfect when space is limited.



### To get the look:

Mark painted the background wall with Resene Lumbersider tinted to Resene Half Lemon Grass.

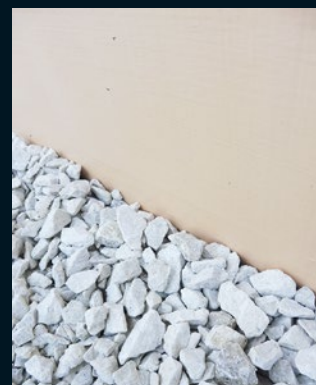

### Other ideas:

For a cool green look paint the mini garlic bed with Resene Lumbersider tinted to Resene Parsley.

For more ideas and inspiration visit your local Resene ColorShop or [www.resene.com/colorshops](http://www.resene.com/colorshops).

Check out more project ideas online [www.resene.com/projects](http://www.resene.com/projects).